



Maintenance Manual
Index of operation items

visual inspections	air cooling system	cooling	throttle adjust- ment	tires	battery
0050	0912	2010.1		4020	5410
0051		2010.2	3022	4050	
0053	air cleaner	2010.3		4051	body mount
	0931	2011	idle speed	4060	6070
			3052	4070	
engine oil and fil- ter change	air cleaner	cooling	hitch	prop shaft	door hinges
0101.1	0951	2050	3120	4121	7220
0101.2			3151		7221
0101.3	air cleaner 460	coolant		brakes	soft top
0101.4	0980.1	2080.1	3254	4210	7710
	0980.2	2080.2	shocks	4251.1	
valve adjustment	V-belts	2080.3	stabilizer	4251.2	sun roof
0560.1	1350		3270	4251.3	7730
0560.2		replacing hoses		4253	7750
0560.3	V-belts	2081	front axle	4280	
0560.4	1351.1	oil change manual	3301	4290	wipers
	1351.2	transmission	3310	steering	8210
Stromberg carbu- retor	1351.3	2590	3321	4610	8252
0711	check spark plugs	2601	3370	4611	headlamp
	1550	2610	3372	4653	adjustment
adjusting idle		oil change autom.		4671	8260
0750.1	check points	transmission	rear axle		8280
0750.2	1551	2702	3501	fuel system	
0750.3		2710.1	3510	4750	tele aid
0750.4	check timing	2790	3571		8281
0770	1554		3572	exhaust system	
		oil change		4970	air conditioning
fuel filter	dwell angle	transfer case			8312
0780.1	1560	2801			8332
0780.2	1561	2810			8351
0780.3					
0780.4	generator	clutch			pollen filter
0780.5	1571	2910	service intervals		8381
0780.6		2912	460 20.000 km		
0780.6	replace spark	2950	461.463 10.000 km		hood lock
	plugs	2953	461.463 15.000 km		8821
fuel pre filter	1580.1	2981	461.463 20.000 km		
0781.1	1580.2	2982	461.463 30.000 km		seat belts
0781.2			463 ASSYST		9150
0781.3	replace points				paint damage
	1581				9850